N54 Tune Comparison Retail Price (Data as of 3/1/2013)	JB4 \$479.00	PROcede Rev3 \$745.00	\$895.00	Eurocharged (Stage 1) \$524.99	GIAC Flash (Stage 1) \$800.00	GIAC Flash (Stage 2) \$1,000.00	\$1,799.00	Price of tune	Definitions	
Requirements						upgraded intercooling	Oil-Cooler Required	Requirements before installa	tion	
Installation Time Installation (Home/Dealer)	30 - 45 min	30 - 45 min	< 30 min	< 1 hour Home/Dealer	< 1 hour Dealer	< 1 hour Dealer	< 1 hour Dealer	Time it takes to install Place of installation		
Installs through	ECU / USB	ECU / USB	Home/Dealer OBD2 port	OBD2 port	OBD2 port	OBD2 port	OBD2 port	Installs through ECU(Engine		
Type of Tune	Piggyback (PnP)	Piggyback (PnP)	Flash	Flash	Flash	Flash	Flash	Piggyback = Hardwire / Fla Compatible Drivetrains	sh = Software	
Compatible with AT/MT/IS/DCT/XDrive Maps	· · · · · ·	•	· · · · · · · · · · · · · · · · · · ·	· ·		· ·		Comparine Diversins		
Diagnostic invisibility	Y	√	AccessPORT	†† Handheld Programmer			1	Dealer detection of tune insta		
Store/Preset Maps/Stages Map/Stage Selection	9 Progressive (100)	5 Progressive (100)	100 16 Stages/30 Maps	1	1 (Future 4) 4	1 (Future 4) 4	1	Number of maps stored in us Defines the maximum boost		
Custom Adjustable Mapping	√.	√.	AccessTUNER Race	-	-		-	Adjust different parameters i	n a given map	
E85 (Ethanol fuel) Maps Naturally Aspirated / Non-Turbo Map	<u> </u>	Y	2	1	-	1	-	A dedicated map when using A dedicated map to disable t		
Time it takes to switch map	1 - 2 seconds	1 - 2 seconds	2 min	-	-	-	-	Amount of time it takes to sy	vitch a map	
Map Switching User Software Interface	On-the-fly	On-the-fly	AccessPORT AP Manager	†† Handheld Programmer	(FLASHLOADER)†††	(FLASHLOADER)+++	-	How to change a map of the Windows software interface	tune	
Engine Tuning software			AccessTUNER Race	-	-	-	-		librations for vehicles equipped with virtually any performance modification.	
Power Average Power Gains HP (Stock)	60-80	60-80	65-75	45-50	40-50	75-85	50-60			
Average Power Gains TQ (Stock)	65-80	65-80	80-90	55-65	50-60	80-90	60-70	Average horse power gains of Average torque power gains	over stock	
Dynojet numbers RWHP (dci, 91 octane) Dynojet numbers RWHP (Full mods, 91 octane)	353hp 371tq (map 1) 366hp 390tq (map 2)	356 (stage 1) 390 (stage 3)	351hp 361tq (stage 1)	339 352	329 350	368	332 359	Dynoed numbers with a dci		
Dynojet numbers RWHP NITROUS (Full mods, race gas)	542 (map 6)	485hp 520tq	370hp 417tq (stage 2)	352	350	389	- 359	Dynoed numbers with full m Dynoed numbers with full m		
Dynojet #'s RWHP Upgraded Turbos (Full mods, Race gas)	511hp 509tq	653hp 523tq	553hp 631tq					Dynoed numbers with upgra	ded turbo kit Stock Baseline = 291 HP 303 Torque	
Turbo boost psi peak Number of reported cars in the 11s	20 14	20 11	22 1	11.8 0	13.7	15.7 1	13.2 0	Peak psi each tune makes de Cars running ¼ mile in less ti		
Features										
Clear/Read tuner codes Compatible with BT Cable	(map 0)	(Valet Mode)	AccessPORT	BT Tool **	BT Tool **	BT Tool **	BT Tool **	Reads & clear tuner codes for Use the Bayarian Technic Di		
CPS Offsetting (Ignition Timing Control)	(Optional)	✓/ignition advance	n/a	n/a	n/a	n/a	n/a	Phases shifting of the crank p	oosition sensor waveform to induce timing retard/advance	
Diagnostic code read/clear ECU codes Full boost control	1	4	AccessPORT	BT Tool **	BT Tool **	BT Tool **	BT Tool **	Read & Clear ECU codes	er the boost control solenoid and boost set-point (boost target)	
Full fuel control	V	1	1	· /	· ·	1	· ·		r the boost control solenoid and boost set-point (boost target) y given AFR under any given condition	
IN-DASH Boost Gauge	✓	✓			- 1	-	-	Display Boost/Information o	n your dash board	
Instantaneous data display in graph Laptop connectivity, datalogging, & custom tuning	7	7	AccessPORT	- Dealer	Dealer	- Dealer	- Dealer	Display instantaneous real-time data on laptop Use of laptop to data-log and custom tune		
Launch Control	✓	✓	AccessTUNER Race	-	-	-	-	It allows boost to built up wh	tile brake torqueing for 2-3 seconds.	
Methanol Integration/Compatible Nitrous Integration/Compatible	Both Both	Both Both	Compatible Compatible	Compatible Compatible	Compatible Compatible	Compatible Compatible	Compatible Compatible	Use of Methanol with tune Use of Nitrous with tune		
Overboost Protection and other safety features	✓ ·	✓ ×	✓ ✓	√ V	✓ ✓	✓ ✓	✓ ×	Protects turbo's against over-spooling		
Progressive methanol mapping	1	× ,	-	-	* 1	-	-	The more meth flows, the mo	ore aggressive the map settings will become	
2-Step Rev Limiter Adjust Speed limiter		100	AccessTUNER Race	6.00	100		1 1	Adjust your speed limiter of		
Removes speed limiter		1	✓	✓	✓	✓	✓	Removes the governor to inc	rease top speed	
Drivability Enhanced throttle reaction	✓	✓	/	√	1	V	/	Improved response on thrott	ic .	
Smooth power transitions	✓	✓	V	*	V.	V .	V	Puts down more power to wi	heek	
Higher rev limiter Optional Downpipes/FMIC/DCI/Exhaust	-	7	1	· ·	4	'	1	Removes the 7000 RPM Rev Installation of mods. Differen		
Engine Parameter Reads		-								
02 VOLTAGE	✓	1	✓	✓	1	✓	✓	Signal from the o2 sensor. In sensor	this case, the 0-1v signal from the rear (post cat) o2 sensors. Also called post cat lambda	
AFR Monitor	✓	✓	1	1	1	/	/			
AMBIENT PRESSURE		1	1	/	/	/	/	Air/Fuel ratio monitoring of a Pressure at the TMAP sensor	either the rear o2 sensor voltage or the actual nominal lambda signal from the CAN network : Basically atmospheric pressure	
APPLIED TPS	✓	✓	1	1	1	/	V	Throttle position / Gas pedal		
BOOST DME BOOST ACTUAL	*	1	Y	1	1	Y	1	Increase in pressure (psi) The DME's value for boost, i		
DME BOOST TARGET	*	1	1	1	· /	1	1		.e., what it is seeing irget. i.e., what it wants to see	
GEAR	✓,	V	V	1	V	V	1	What transmission gear you's	re on	
FUEL PRESSURE LPFP/HPFP IAT	*	*	· /	· /	,	· /	· /	Flow of fuel Inlet air temp (Air intake tem	perature)	
IGNITION ADVANCE	✓	1	✓	1	1	1	✓	Actual ignition advance angle		
KNOCK STATUS	✓	*	Y	· ·	· ·	· ·	· ·	Active Knock Monitoring	e manifold (upstream of the throttle). This can be vacuum (when below ambient pressure)	
MANIFOLD PRESSURE	✓	✓	✓	~	1	~	~	or boost (when above it)		
O2 Simulator	✓	✓	AccessTUNER Race	-		-	/-/-	A feature designed to adjust with a fully catted exhaust sy	rear o2 sensor voltage so that the DME sees normal voltage swings that it would associate stem	
OIL TEMP SENSOR	✓,	V		V	1	V.	V.	Monitors oil temperature		
PEDAL POSITION ROADSPEED (MPH)	1	1	· /	1	,	1	*	Knows in what pedal positio Monitors how fast the vehicl		
RPM	V	/	1	V	1	1	1	Engine Speed in revolutions		
System Voltage THROTTLE BLADE POSITION	4	1	4	4	1	4	*	System voltage	le blade. This is controlled by the DME	
WASTEGATE DC	*	,	,	,	,	,	· /		ne boost control solenoids. 100% is full open. 0% is full closed. 50% is pulsing open and	
		· ·	· ·	•	· .	· ·	· ·	closed in equal intervals		
WATER TEMP User Adjustable Parameters		·	V	~		~		Measures car water temperat	ure	
AutoTuning	V	V	5	-100	-	-	- //		condition & modification of car	
02 Modifier Barometric Compensation	*	*	· ·	1				Suppress catalytic conversion Boost targets are reduced as		
Bog Fix	√	Built-in	✓	-		10000		Option to hold more boost through high RPM shifts		
Boost CanClear	1	*	· ·	1		3/4/40		Maximum allowable boost on the current map It prevents "tuner" codes from ever trievering dashboard lights		
Cold Start	Built-in	Built-in	-					Tune increases boost after Oil temp increase to a operating temperature		
Fuel Future Use	1	Built-in	/	1		//	100	Amount of fuel enrichment b		
Future Use IAT Decay	V	· /	1			-	1/29/07	Setting for tuner to implement Boost taper based on air intai		
Ign Correction	✓	✓	1		11.00		1/-	The amount of positive or negative ignition timing/advance adjustment the tune/dme is inducing at any given time		
Lag Fix	✓	Built-in	-	-	-	-	-	Controls the default wastegate position during cruise		
Pedal Target Speed Delimiter	✓	1	Stock / Linear	į,	-	-	-	Adjusts how aggressive you want the throttle response		
Throttle Response/Gain	/	1	1				-	Removes factory top speed limit Controls how aggressively the tune attempts to meet the boost		
Torque	1	4	✓	-	-	-	-	Increase in low-end boost		
Traction Assistance Wastegate Position	Ý	· /	1	1	-	-	-	Designed to reduce power off the line or in low gears The position of the Wastegate actuator/flapper door		
Company										
Money back satisfaction guarantee	<u>14 days</u>	<u>15 days</u>	30 days	30 Days	30 days	30 days	30 days	Return policy		
Manufacturer's Warranty Manufacture's Websites	hurgertuning com	procedetuning.com	1 Year	60 Days www.eurocharged.com	Varies by Dealer www.giacusa.com	Varies by Dealer www.giacusa.com	Factory Matching www.dinancars.com	Product Warranty Website		
Manufacture's websites Manufacture's software download	<u>burgertuning.com</u> <u>www.n54tech.com</u>	www.procedetuning.com	www.cobbtuning.com www.cobbtuning.com	- www.eurocnargeu.com	- www.gacusa.com	-	-	Website Download page		
Free downloadable software/map updates	<u> </u>	✓	✓	-	-	-	-	Free software and map updates		
Staff technical support number	(805) 660-6227	(866) 584-7531	(866) 922-3059	(281) 398-9700	(949) 724-0014	(949) 724-0014	(800) 341-5480	Phone number		
Staff technical support email	terry@burgertuning.com	sales@vishnutuning.com	support@cobbtuning.com Do-it-Yourself	sales@eurocharged.com	sales@giacusa.com	sales@giacusa.com	-	Email address	Mode for NEA	
Procede v5 USB Cable Through Firewall into Glove box			Do-it-Yourself JB4 USB Cable install for through the firewall						Mods for N54 FMIC - Front mounted intercooler	
Vishnu "PnP" Methanol kit installation (\$795)	45 D-0-1-/	1111-111-11	BMS Methanol kit installation (\$599)						Catless DPS - Catless downpipes	
FlexFuel Conversion Kit (\$795) + PROcedeFlash DI * On the fly switching available via Laptop, hardwired sw		## Handheld Programmer (\$479.99) ## GIAC Flashloader AccessPORT AccessTUNER Race Alpina B3 Transmission Flash						nsmission Flash	DCI - Dual Cone Intake Oil Catch Can	
** BAV TECH BMW SCAN TOOL (\$287)									LSD - Limited slip differential	
*** BMS Speed Limit Defeat removes speed limiter (\$150)						Index of E90/E92/E93_DIY				
User Software Interface is windows compatible. Mac		Doot Co.	mp 4 (\$0)	Darallale Deel	ton 0 (\$70.00)	Vmware Fusi	on F (C40 00)	7		

JB4 Extra Features

1st and 2nd gear user adjustable boost 0-20psi - Torque reduction for improved traction.

Active bogfix - Allows manual transmissions cars to hold more boost between shifts than they could otherwise.

AutoTuning map 5 - Optimizes tuning automatically for your mods, octane, & conditions continuously as you drive.

Built in code reading/clearing - No need for 3rd party tool. Code scan be read in dash for quick access or through the laptop interface which includes the code description and suggested course of action. Also reads/delete hidden tuner detection codes

CANbus Integration - By reading CAN data directly, the JB4 can monitor (real-time) things like boost target, boost error, manifold pressure, actual throttle position, oil temp, etc.

Canflap - The exhaust flapper makes the exhaust a little louder during cruise.

Custom Tuning map 6 - Allows custom tuning of boost, air/fuel curve, and CPS (if equipped) for those interested in custom tuning for their specific vehicle or needs.

DTC Off - DTC Off optional setting upon startup (It automatically selects the DTC option when starting the car)

Gauge hijacking - In dash user adjustable shift light, boost gauge, IAT gauge, timing gauge, & meth gauges.

Gauge Sweep - Gauge sweep with the tach and speedo upon startup of engine

MaxCool mode - MaxCool is an JB4 algorithm that improves engine cooling by increasing the speed of the electric water pump and engine cooling fan as a function of water temperature. When enabled you may hear the loud engine fan and water pump running

Non Turbo Map B - IT forces a 3100 limp code disabling turbo's with 0% Wastegate duty cycle. The final version uses CAN commands to suppress the CEL display in dash, but they are not properly working yet, so this firmware simply allows the CEL/SES to display in dash while map 8 is selected.

Progressive methanol map - Integrates with all popular methanol kits for fully progressive control and safety.

Stealth mode - Programs gauges to only hijack when gas pedal is depressed more than 50%.

Steering wheel controls - Change maps, adjust gauge hijacking, and run diagnostics right through the steering wheel. Even when driving on the highway.

JB4 Instructions - Manual on how to control the JB4

JB4 Safety System

Over boost - User defined maximum boost ceiling regardless of maps or settings entered.

Waste gate DC - Detects boost leaks and other causes of excessive duty cycle.

Fuel pressure Failure - Detects failing fuel pumps or loss of fuel pressure

Leanrun - Detects lean air/fuel ratios at wide open throttle.

Oil temp protection - Boost targets are reduced when the engine oil temperature is low. By approximately 160deg F, full boost potential is achieved. Above 280 deg F, boost begins to taper downwards abruptly for engine safety.

Interj

Fully netbook compatible screen resolution.

Single file firmware/mapping for each update. No chance of mismatched firmware/maps and no need to upload new maps for different stages or transmissions.

User adjustable air intake temperature decay. Can double as software based methanol safety.

Iser adjustable air/fuel ratios

User adjustable boost control parameters (throttle gain, pid gain, etc.)

User adjustable lagfix (Wastegate position during cruise)

User adjustable low end and high end boost

User adjustable top end boost taper.

USB Interface

PROcede v5 Extra Features

1st and 2nd gear User Torque Adjustable (0-100%) - Same as above. But specific to gear selection. Reducing this setting in 1st gear can greatly improve traction in some conditions.

2-Step Rev Limiter - With this feature enabled, it is triggered it when the car is stationary AND with the clutch pedal depressed. When these two conditions are met, you can floor the throttle pedal and engine speed will be limited to your 2-step RPM values. In the resume when resu

3bar MAP sensor input - For single turbo application

Active Dash Display Map - Keep track/display active map number.

Adjustable Learning Gain (Future Use 2 adjustable) - Not exactly new but some of you may not know what it does and why it is useful to adjust it. To learn what it does and how to set it for you particular car, please go The Basic v4 Custom Tuning

Guide. Dialing this value in property will make your car faster and more enjoyable. The Default value is 45.

<u>Adjustable Audible Shift Alert/Light</u> - Now you can set up a 2 stage shift light through the Procede's Command Center (no laptop required). Adjustable from 5000 to 8000rpm. The shift light function is delivered by your in-dash turn signal lights. And the audible beep comes through loud and clear through your stereo speakers. This feature is currently only available in non-ldrive cars.

Automatic Wastegate Compensation - Autotune the wastegates

AutoTuning - The Procede, not only offers timing control, it also has the ability to quantify how aggressive the tune, at any given condition/moment, by monitoring knock control activity through its CANbus integration. The Procede has the ability to Automatically adjust Fuel, Timing & Boost settings as a function of how the engine is running. This means that it will AUTOMATICALLY compensate for changes in conditions, changes in modifications, changes in fuel qualities, etc.

Built -In Code Reading/Clearing - The Procede also gives you the ability to read and clear all DME diagnostic codes. This means that there is no need to purchase an expensive third party diagnostic toelf Clearing codes doesn't even require the use of a laptop. Very simple to use.

Built-in PWM Methanol Control I/O - The Procede Rev3 has a dedicated I/O for Methanol control using a Methanol kit

CANbus Integration - By reading CAN data directly, the PROcede can monitor (in real-time) things like boost target, boost error, manifold pressure, actual throttle position, etc

CANclear Catalyst - The CANfeature that actively prevents can inefficiency codes from triggering when running catless exhaust systems. With this approach, there is no need to modify the rear o2 sensor signals-- which has unwanted side-effects.

CANclear Tuner - This means all the usual codes typically associated with running a tune such as all 3 tuner codes, fuel pump plausibility and the "burn out" code triggered by doing a burn out at the drag strip

Note: The CANclear feature automatically disables itself when any codes, other than the ones mentioned above, are triggered. This is so that any other potential problem does not go unnotified.

Command Center - No laptop required to use it! With it, you can calibrate your in-dash gauges, select your shift-light RPM, reset several adaptions and much more. You can use your cruise control stalk to navigate through the selections.

Dedicated input for clutch switch

Dedicated input for external wideband sensor

Dual Bank Wideband AFR Monitoring - Reads & monitors ACTUAL Air/Fuel Ratio channels. The Procede actively monitors BOTH these channels every time the engine goes on boost. If AFR ever goes leaner than the desired threshold, it triggers a self-protective valet mode accompanied by a single SES light flash every 5 seconds indicating a Leanrun fault condition.

Elat-Foot Shift/No-Lift Shift (6MT) - With the ignition cut, you can upshift without ever needing to lift the throttle. With no throttle lift, the throttle blade will not close and boost will not be discharged through the bypass valves. Additionally, not lifting off the throttle will reduce the work you need to do and eliminate the possibility of a body timed shift. It will also reduce shift times appreciably!

Flexifuel sensor capable - The heart of our Flex-Fuel module is a Siemens Fuel Composition/Temp sensor. This sensor intercepts into the factory fuel supply line using the supplied plug-and-play push-in fuel hoses. It is firmly secured to your inner fender

Flextual sensor capable - I he neart of our Flex+uel module is a stemens Fuel Composition? lemp sensor. This sensor interferepts into the factory fuel supply line using the supplied plug-and-play purs-in rule noses. It is firmly secured to your inner fent using a supplied mount. The sensor's output signal feeds into the PROcedee is Res-Fuel signal injury tid plug-and-play harness. By monitoring this sensor's signal output, the PROcede is a belt to detect the precise amount of ethanol in the fuel. With this valuable information, the PROcede is a let to after fuel, ignition timing and boost settings accordingly to achieve ideal combustion and power. Also included in the package is a PROcedeFlash DME update that eliminates various fuel/ignition restrictions present in the factory DME code.

Global learning gain - The scale that dictates the range of active boost control learning. Adjustable depending on the relative stiffness of the Wastegate actuators.

In-Dash Boost/Information display - Display Boost/Information on your dash board.

Launch Control - It allows up to 8-9psi to be built while brake torqueing for 2-3 seconds. Without this feature, the engine bogs down after just a moment of doing this. With launch control, you can also define an ignition retard amount to be induced during this brake torque/boost build period that will reduce strain on the drivetrain/rear wheels so you are not fighting the car at the launch.

Lean Cruise - Built into the maps. It activates automatically during extended cruise conditions. It just targets a slightly leaner AFR while, bumping up ignition advance slightly to keep engine torque constant. You will see a mpg improvement.

Nitrous/staged Methanol CANtroller - The Procede's built-in nitrous control system which prevents nitrous from triggering until a certain set of engine conditions are met. Big benefits to safety & drivability.

Non Turbo Map 3 - Naturally Aspirated Mode | Remove those turbo's with a change of a map!

On-the-fly mapswitching - Toggle through the maps by simply double clicking the DTC button while driving.

PROcede Clear Codes - Ability to clear all OBD and BMW extended codes through the PROcede User Software. This means that it will erase all present and historical/shadow codes

Progressive Mapping Strategy - There are only 2 maps. One for 6AT. And one for 6MT. Now, the map is progressively adjustable from 0 to 100% as defined in the User Torque entry. An entry of 0% will result in a very conservative 11psi peak boost. Whereas a setting of 100% will result in a 20psi peak boost.

Progressive Methanol Mapping - The Procede monitors the actual 0-5v analog methanol flow signal from your injection failsafe device (not the on/off 12v trigger signal). As such, it can constantly modify your tune settings according to actual meth flow This means that there are no discrete map changes or abrupt transitions. By adjusting the tune settings as a function of actual methanol flow, there is no concern with methanol hardware failure.

Speed Delimiter - For cars with Sport packages, this maximum speed is an indicated 155mph. For non-Sport cars, it's 130mph. You can defeat these limiters by turning the speed delimiter feature ON in the user adjustable menu. Doing this has no effect on traction/stability control functionality. The default setting is OFF.

Switchable Barometric Pressure compensations - Can be enabled/disabled with the not-so-aptly named "Lagfix" user adjustable. A setting of "0" turns it OFF. A setting of "1" turns it ON. With it ON, those running at higher altitude will run less boost.

The default setting is OFF.

Upshift Softening Adjustable (0-50) - In 6AT applications, this setting determines the amount of throttle closure that occurs during moderate to full boost up-shifting. The less throttle closure, the more mid-shift boost spike. The larger the value, more throttle blade closure and less mid-shift boost spike. The smaller the value, the less closure and more mid-shift boost spike. In 6MT applications, this setting doesn't do much.

Vishnu Command Center - There is no laptop required to use it! You can calibrate your in-dash gauges, select your shift-light RPM, resel several adaptions and much more. You can use your cruise control stalk to navigate through the selection

Wastegate Rattle Fix - If your car has wastegate rattle during idle, light cruise and decceleration conditions, try reducing this value. Reducing this value, will move the wastegates more open during these conditions.

Procede Instructions - Manual on how to control the Procede v5

PROcede Safety System

Excessive Wastegate DC - If boost DC is higher than the user definable limit for longer than the time delay, then a valet mode is triggered.

Fuel Pressure Failure - If a minimum fuel pressure voltage is not maintained for longer than the given delay, above 10psi of boost, then a valet is triggered.

Leanrun - If AFR is leaner than 13.5:1 at full boost, above 4500rpm for a period longer than the user definable delay, then a valet mode is triggered.

IAT based boost compensations - Boost targets are gradually reduced as intake air temperature starts to rise above 140deg F.

Oil temp based boost compensations - Boost targets are reduced when the engine oil temp is low. By approximately 170deg F, full boost potential is achieved. Above 260 deg F, boost begins to taper downwards abruptly for engine safety.

Overboost - If boost exceeds the user definable overboost limit for a period longer than the user definable amount of time (delay), then a valet mode is triggered.

provide the user r with info as to what fault triggered the valet mode, the SES will flash the following code every 5 seconds of SES light flashes – leanrun fault verboost fault astegate overDC fault COBB Tuning Extra Features Change Maps - The Acco sPORT can store up to 100 maps so you can be ready for any situation drag strip to beat your last ET? Change over to your high boost map. eading out on a long boring highway drive? Perfect time for that fuel economy map Load the Anti-Theft map to prevent start-up. Parking your car overnight in a risky area? Handling your pride and joy over to a valet for dinner? Switch to the Valet map to limit performance.

Data Logging - The AccessPORT functions as a hand-held data logging device. Plug the AccessPORT into the OBD-II port, select Data Logging from the menu and choose which monitors you wish to data log. Choose as few or as many monitors as you like. Hit enter and data logging begins. Once the data gathering is complete, hit the enter button again. The data is stored as a data log file within the AccessPORT. The AccessPORT can store up to 10 hours of data logging Gauges - Gauges allow you to view sensor data and calculated values in real-time right on the AccessPORT. Any monitor that can be data logged can also be viewed in real time using this feature. Live Data can function as an auxilliary gauge to ment the stock gauge cluster, or it can be used to help in fine tuning custom calibrations. Naturally Aspirated/Non-Turbo Map - A Valet map that not only "turns off" boost, but also turns down load and induces a rev limiter. A "non-turbo" map could also be made using AccessTUNER Race Performance Measurement - Every AccessPORT has built in Performance Monitors. These are great for showing the performance of your vehicle in the current state of tune with the modifications you have installed as well as helping to quantify performance gains when you make additional modifications. These are also great tools to help you improve your skills at the drag strip. It's like printing off your own time slip any time you wan! The following Performance Monitors are available: 60' Time: Elapsed time to 60' distance. Indicates how well your car is hooking up off the line. 330° Time: Elapsed time to 330° distance
0-60 mph: See where your car stacks up against the 0-60mph times published in the major car magazines 1/8 Mile: Elapsed time and vehicle speed at 1/8 mile distance (660'). 1000' Time: Elapsed time to 1000' distance.1/4 Mile: Elapsed time and vehicle speed at 1/4 mile distance mometer. Based on car weight & a Rev Warning Light - The AccessPORT screen also functions as a Rev Warning Light. Simply enter the RPM you want the Rev Warning Light to activate at. The screen will brightly flash red and white to alert you when that RPM has been reached, while imultaneously showing any Live Data monitor! Simple Installation - No tools are needed and no computer connection is required. Just plug the AccessPORT into the car's OBD-II port and follow the simple step-by-step on-screen instructions. In just a few minutes you will have a new performance map loaded on your ECU and be ready to experience the additional power and improved drivability of a proper tune tailored to your vehicle's modifications.

The AccessPORT comes preloaded with several performance maps for common modifications, and includes access to a free online database of additional Off-The-Shelf maps Trouble Codes - The AccessPORT allows you to read engine codes to help troubleshoot issues and potentially save you from an expensive trip to the dealership. A brief description of the trouble code is also provided, which is handy when you don't happen to have a shop manual in your pocket. The AccessPORT will read any trouble code reported by the ECU. In most cases this equates to hundreds of trouble codes and descriptions to help diagnose issues where ever you may be. Once the issue is solved, the AccessPORT can be used to clear the codes to turn off the check engine light Uninstall - In the event that the car must be returned to the stock configuration, the AccessPORT can be completely removed and the ECU restored to its factory condition. Once the AccessPORT is uninstalled, it can be installed on any vehicle the ccessPORT part number supports. Since the AccessPORT can be uninstalled, combined with the ability to update the AccessPORT firmware via the internet, it rétains a high resale value. BMW AccessTUNER Race - AccessTUNER Race is engine tuning software created for enthusiast tuners. AccessTUNER Race allows the user to get into the heart of the OEM ECU and create custom calibrations for vehicles equipped with virtually any ance modification. The end result is a tune that is custom tailored to the vehicle's unique modifications, producing maximum power gains while maintaining the drive-ability and sophistication inherent in the OEM ECU Functions INTERACTIVE - The vibrant full color screen and an intuitive interface make communicating with your ECU a breeze, without the hassles of a laptop. Stay connected and information of the contractive of the Warning Light Use as a shift light Set desired DDM to trians Set desired RPM to trigger.

On-Screen Sensor and Data Monitoring
Use as an auxillary gauge.
Select from many channels to view live data. On-Screen Performance Measurement .0-60mph timer. 1/4 mile electronic time slip (60' time, 330' time, 1/8 mile ET and trap, 1000' time & 1/4 mile ET and trap). Simulated dynamometer measures modification gains. On-Screen Diagnostic Trouble Code Tool Read ECU trouble codes and trouble code definitions
 Reset trouble codes to turn-off check engine light. On-Screen Map Library Viewing Read details of the currently installed map Browse and read details for every map loaded on the AccessPORT Select and load any of up to 20 maps stored on the AccessPORT. On-Screen Fuel Economy Gauge

Instant Fuel Economy lets you see how your driving inputs affect fuel mileage. Average Fuel Economy shows fuel mileage for current trip. Accumulated Average Fuel Economy shows fuel mileage spanning multiple trips.

Reset Average and Accumulated Average Fuel Economy to start over. Initiate Data Logging

Log data from any of many sensor and calculated data monitors.

Start and stop data logging sessions with the push of a button.

Configure sampling rate for each data monitor. Store up to 10 data logs with up to 10 hours of data recording. creen ECU Settings (for some applications) - Launch control adjustment.

Convenience - The AccessPORT is ready to go when you are. Right out of the box, simply plug it into your car's OBD-II port and install. No tools or special skills are necessary. It's small size makes it very portable, easily fitting in a shirt or pants pocket. And the full color screen and simple intuitive interface gives you the power to control your ECU right in the palm of your hand. In multiple language Take up to 20 map calibrations with you on the run. All of your maps can come along for the ride. Easily experiment with different launch control settings without the hassle of a computer. Keep a high boost map, aggressive timing map and a race gas map with you and load when needed The AccessPORT comes with many maps pre-installed. These maps cover many of the most common modifications performed by fellow enthusiasts. There are also maps included to protect your vehicle from abuse. Load the Anti-Theft map to prevent you car from being started when you are away. Or load the Valet map which limits revs and boost when you are out on the town and your car is in the hands of someone else hen the time comes to return your car back to its original stock condition, the AccessPORT can be completely uninstalled in just a matter of minutes. It just takes a push of a button and no tools or computer are needed Upgradeable - The AccessPORT is designed to grow with the ever changing modifications the most demanding tuning enthusiasts aspire to. Likewise, the AccessPORT itself must change and grow to stay on the cutting edge of tuning capability The AccessPORT is fully upgradeable via an internet connection. The included AccessPORT Updater software automatically checks to make sure that the firmware on your AccessPORT is the most up to date version available. This ensures your accessPORT has the latest and greatest functionality available for your vehicle model. -Off-The-Shelf Maps available in the AccessPORT Map Database are often upgraded to take advantage of the latest table discovery or new features deployed on the AccessPORT. Updated maps are publicly announced and are available for free download. The AccessPORT Manager allows easy transfer of maps and data logs between the AccessPORT and PC. -The AccessTUNER Race and AccessTUNER Pro software also receive updates to provide additional access to tables and control of new features as ongoing ECU discovery opens up new functionality. Software upgrades are announced and download links e provided to AccessTUNER software users. Support - Purchasing the AccessPORT gives you access to COBB Tuning's outstanding customer support. Our Customer Service and Technical Support staff is standing by to help you with any issues that may arise. Subject matter experts are only a telephone call 866-922-3059 or email tech@cobbtuning.com. COBB Tuning also hosts forums specifically for AccessPORT users. The forums are divided into vehicle make and model, and are a great place to share experiences with other enthusiasts. These forums are monitored by COBB Tuning engineers and subject matter experts who will provide guidance and support when necessary.

COBB Tuning also has an extensive network of independant professional engine tuners, called the PRO TUNER network. These tuning experts use AccessTUNER Pro software to custom tune your AccessPORT should you want to extract the maximum pow ains available. These tuners have the latest versions of the AccessTUNER software and are directly in contact with COBB Tuning Calibration Specialist to meet the most exacting needs of the tuning enthusiast.

Ininstall - In the event that the car must be returned to the stock configuration, the AccessPORT can be completely removed and the ECU restored to its factory condition. Once the AccessPORT is uninstalled, it can be installed on any vehicle the AccessPORT part number supports. Since the AccessPORT can be uninstalled, combined with the ability to update the AccessPORT firmware via the internet, it retains a high resale value. COBB Tuning Video Tutorials & User Guide

Performance Trouble Codes Installation

Uninstall Update Firmware

BMW Misfire Diagnosis and Repair

AccessPORT Manager Ci

* Everything that is underlined, it's a link referring to that matter

COBB Instructions - Manual on how to control the AccessPORT

Change Maps Data Logging

Live Data